



RECHARGEABLE SAFETY LIGHT


NANOTMG II

MODEL : TL-LD831G

~~~~ K 2762

For your safety, please be sure to read the entire manual carefully and use the product correctly. Please keep the manual in a safe place where you can refer to it at any times. If the product is to be used by a child, the guardian should read the user manual and explain the safety instructions. This product is designed assuming use by bicycle.

 TLLD831GENG-260617 1

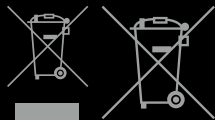

## COVER CONTENTS

PART NAMES AND PACKAGE CONTENTS  
HOW TO CHARGE →

SWITCH OPERATION  
HOW TO MOUNT TO A BICYCLE →

DANGER / WARNING / CAUTION /  
DISPOSAL INSTRUCTIONS →  
BATTERY REPLACEMENT

SPECIFICATIONS  
STANDARD ACCESSORIES / →  
OPTIONAL ACCESSORIES

LIMITED WARRANTY →

 


CATEYE will continue to contribute to society by creating new values in "Safety," "Health," and "Environment". CATEYE supports the Sustainable Development Goals movement proposed by the United Nations.


The USB cable is not included in the package because CATEYE is committed to making environmentally friendly and resource-saving products.

# PART NAMES AND PACKAGE CONTENTS

Light unit

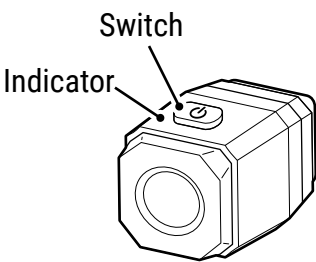


Rubber band and hook (For rear)

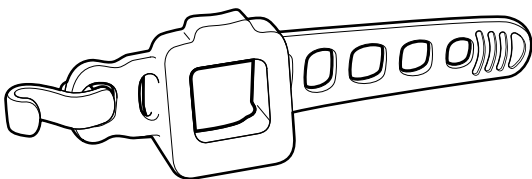 

## HOW TO CHARGE

 **!** Before using the product, refer to the “⚠ **DANGER / WARNING / CAUTION**” (page 4) section and charge the battery.

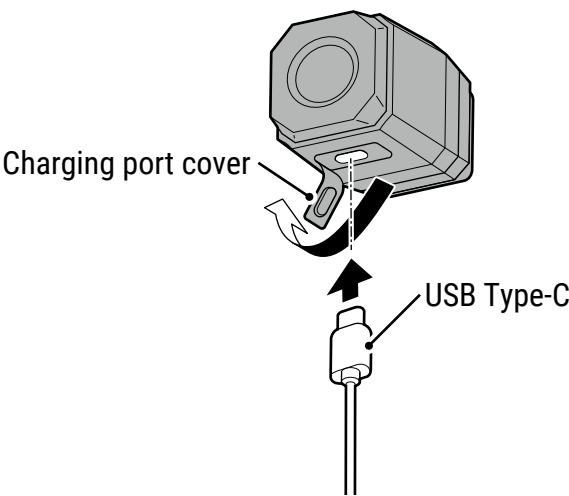

- \* Please prepare a USB cable (Type-C) that can be used for charging (sold separately) before using this product.
- \* If the indicator does not light up when charging begins, a charging error has occurred. Remove the cable and try again.

|                 |                    |                       |
|-----------------|--------------------|-----------------------|
| Indicator       | Constant red light | Off                   |
| Charging status | Charging           | Charging is completed |

**Charging time : Approx. 3 hours (0.5 A)**

# SWITCH OPERATION



\*1 : When turning the light on, it illuminates in the mode that was last used. (Mode memory function)

 
 
\*2 : Press the switch while the power is off to check the remaining battery level.

| Indicator               | Constant red light     |
|-------------------------|------------------------|
| Remaining battery power | Less than Approx. 10 % |

\* If the indicator lights up red when the switch is pressed (regardless of whether the power is on or off), the remaining battery level is below 10%. Charge the product as soon as possible, as the brightness will no longer conform to German Road Traffic Ordinance (StVZO) in this condition.

## HOW TO MOUNT TO A BICYCLE

Attach securely in the mounting position.

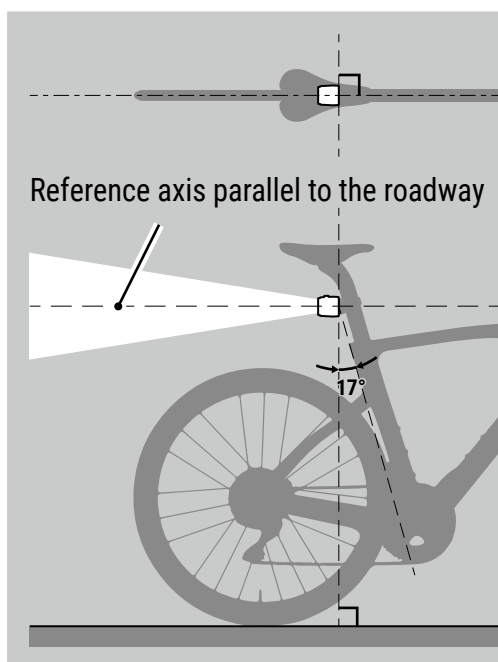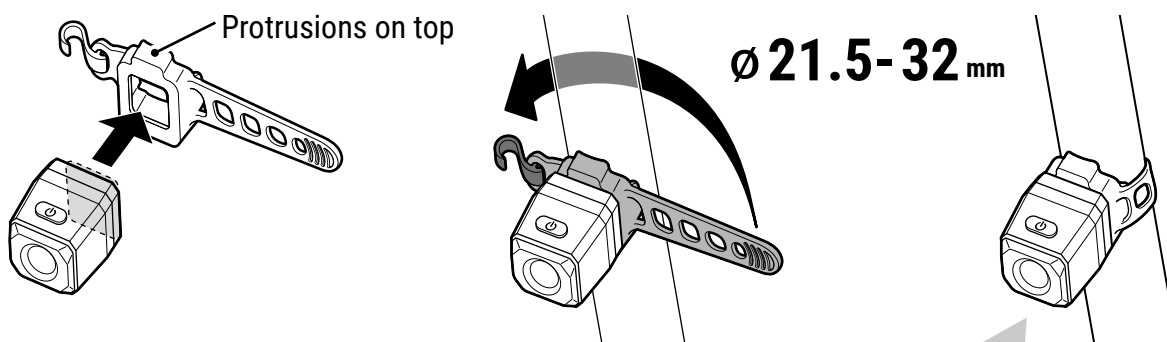

\* Mount the light between 250 mm and 1200 mm above the road surface.

\* Ensure that the light is not covered and is securely attached to the bicycle.

\* The rear light must be mounted at an angle of 17° to the reference axis.

## **DANGER!!!**

- Using or storing the battery in high temperatures will accelerate its degradation. Do not place the product inside a vehicle or near a heater.
- Please make sure to charge in an environment between 5°C and 40°C.
- Do not subject the product to strong vibrations, impacts, or excessive force.
- Do not charge the product, insert or remove the USB plug, or replace the battery with wet hands or a wet product.
- Do not charge or use the battery at any voltage or polarity other than that specified. Do not short-circuit the battery.
- Keep the product out of reach of children.
- Do not disassemble or modify the product or any of the included items. Also, do not use damaged products or parts.
- Do not place the product in fire or heat it.
- If you notice any abnormalities, stop using the product immediately.
- For your safety, please replace the batteries only after they are completely discharged. <sup>\*3</sup>

## **WARNING!!**

- Before riding, for safety reasons, please make sure that the light is securely mounted in a position where it does not block the beam and that it lights up properly.
- For safety reasons, operation should be performed with the bicycle stationary.
- Please check the indicator and brightness regularly and always keep an eye on the battery level.
- Please be sure that no dust or other foreign objects are attached to the plug of the USB cable before charging. Once charging is completed, be sure to disconnect the USB cable from the charging port.
- If rechargeable batteries are left unused for a long period of time, their voltage will drop and their performance will deteriorate. If the product will not be used for a long period, store it in not too hot or not too humid. Please charge it for approximately 30 minutes every 6 months.
- When removing the battery, please be careful not to damage it, drop it, apply strong impact, or cut the cables. <sup>\*3</sup>

## **CAUTION!**

- To maintain the waterproof performance, make sure the cover of the battery compartment and the charging port should be securely closed. Also, make sure to wipe off any moisture thoroughly after using the product in the rain.
- To prevent damage to the product, do not apply excessive force to the charging port.
- Charging and lighting times are approximate and may vary depending on the usage environment.
- If the illumination time is significantly reduced even after charging, it may be due to the battery's degradation and end of its service life.
- When removing or installing batteries, please be careful not to injure your finger. <sup>\*3</sup>
- If the battery is leaking, do not touch the leaked liquid. If you accidentally come into contact with leaked battery fluid, wash it off immediately with running water. <sup>\*3</sup>

## **DISPOSAL INSTRUCTIONS**

When disposing the light unit, please do so in accordance with your local regulations.

 
<sup>\*3</sup> : For EU battery regulation

# BATTERY REPLACEMENT (For EU battery regulation)



Lithium-ion rechargeable batteries may explode or catch fire if not handled properly. For details, please refer to “**⚠ DANGER / WARNING / CAUTION**” (page 4).

- 1 Remove the screw and detach the housing from the battery unit. Then, slide the clear plastic holder attached to the battery unit toward the switch and remove it.

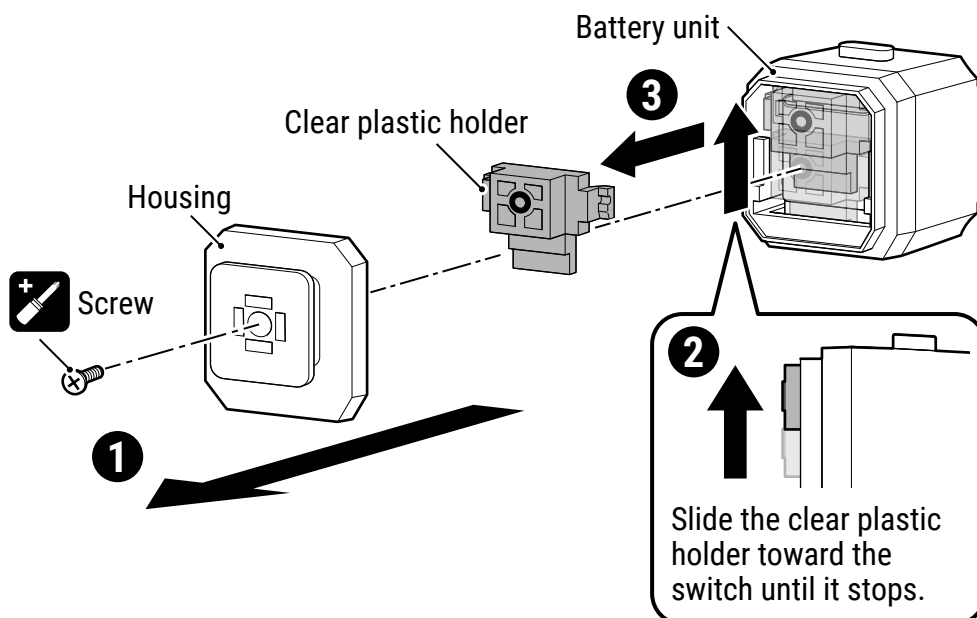

## ⚠ Regarding battery replacement

Please replace the battery correctly according to this manual. Failure to do so may result in unexpected injury, malfunction, or a decrease in water resistance.

Also, please use genuine parts. For genuine parts, please contact your dealer.

## ⚠ Battery replacement precautions

For your safety, please replace the batteries only after they are completely discharged.

## ⚠ Tool usage precautions

When using tools, please be careful not to damage components.

## ⚠ Precautions when handling electronic components

Do not touch the electrical parts, as this may cause a malfunction.

## ⚠ Battery installation and removal precautions

 
When disconnecting battery wiring, please be careful not to damage the cables.

When installing the battery, please be careful to insert it in the correct orientation to avoid short circuits.




## ⚠ Do not use after dropping or impact

Do not drop the battery or subject it to strong impact. Do not use the battery if it has been dropped or subjected to impact.


- 2 Remove the old battery from the battery unit and install the new one.

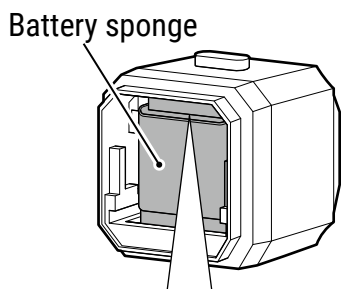

   - 1 Hook your fingernail between the battery and the battery sponge, and tilt the top of the battery toward you.

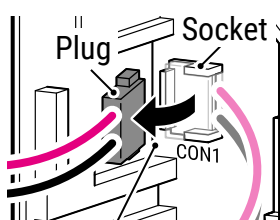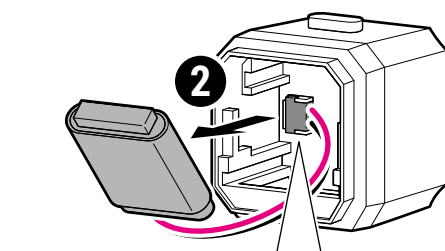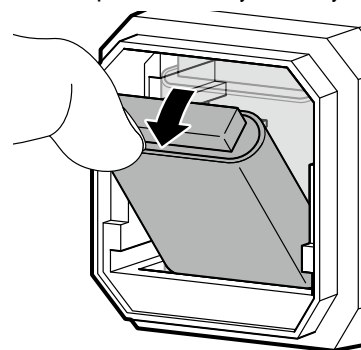


 - 3 When disconnecting the wiring, use the tip of the plug as a pivot point, pull the cable with your fingertips, and remove the plug.

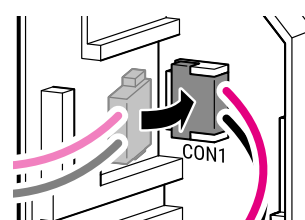


- 4 When connecting the wiring, align the plug and socket, and use the tip of the plug as a pivot point with your fingertips, just as you did when disconnecting it, to securely connect the plug.

 - 3** Insert the battery into the battery unit.

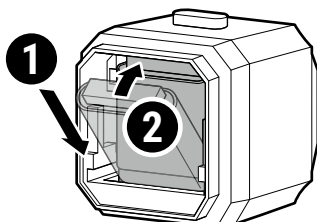

 - 4** Insert the clear plastic holder into the battery unit and slide it toward the side opposite the switch. After attaching the housing to the battery unit, tighten the screws securely.

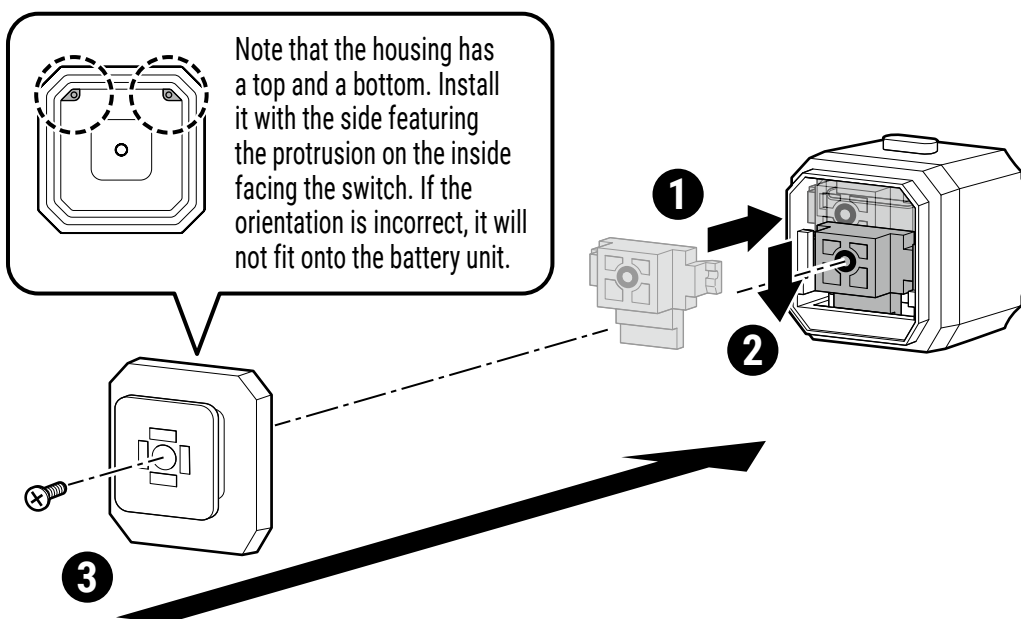

**⚠ Precautions During Installation**

When installing the battery, be careful not to damage the cables.

# SPECIFICATIONS

|                                             |                                                                                |
|---------------------------------------------|--------------------------------------------------------------------------------|
| <b>Light source</b>                         | LED x 1                                                                        |
| <b>Battery type</b>                         | Li-ion Polymer 3.7 V 340 mAh                                                   |
| <b>Charge terminal</b>                      | USB Type-C                                                                     |
| <b>Operating time</b> *4                    | High Power : Approx. 9 hours<br>Standard : Approx. 12.5 hours                  |
| <b>Charging time</b>                        | Approx. 3 hours (0.5 A)                                                        |
| <b>Charge voltage</b>                       | 5 V                                                                            |
| <b>Temperature range</b>                    | Charging : 41°F – 104°F (5°C – 40°C) , Operating : 14°F – 104°F (-10°C – 40°C) |
| <b>Waterproof</b>                           | IPX 4                                                                          |
| <b>Recharge / discharge number of times</b> | About 300 times (until the rated capacity drops to 70%)                        |
| <b>Dimensions / Weight</b>                  | 1-11/64" x 1-1/4" x 1-29/64" (30 x 32 x 37 mm) / 0.86 oz (24.5 g)              |

\*4 : Approximate average runtime at 68°F (20°C).

\* The specifications and design are subject to change without notice.

 
## STANDARD ACCESSORIES

**5342380 Rubber band and hook**




## OPTIONAL ACCESSORIES

**5342550 USB cable**  
(Type-A ↔ Type-C)

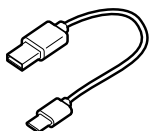

 
**5342280 Bracket**  
(SP-11 : FlexTight™)

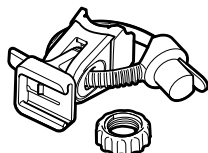


**5342410 Bracket**  
(SP-12-R : FlexTight™)



 **5342451 Bracket**  
(SP-14-RA)

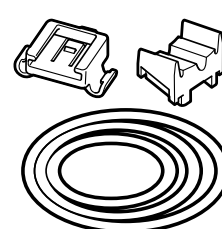

**5342490 Bracket**  
(SP-15)

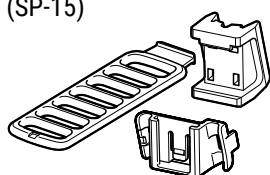 

**5350010 Bracket**  
(RM-3)



\* To prevent accidents and malfunctions, use only genuine parts for installation.

# LIMITED WARRANTY

## **2-year Warranty: Light unit only (excludes battery deterioration)**

CatEye products are warranted to be free of defects from materials and workmanship for a period of 2 years from the original purchase date. If the product fails to work during normal use, CatEye or an authorized retailer will repair or replace the product at no charge (proof of purchase is required.)

Please note that even if the product is within the warranty period, it may not be covered by the warranty depending on the condition of the product and the conditions of use.

## **CATEYE CO.,LTD.**

2-8-25, KUWAZU, HIGASHI SUMIYOSHI-KU, OSAKA, JAPAN 546-0041

For inquiries, please visit <https://cateye.com/intl/contact>

[globalservice@cateye.co.jp](mailto:globalservice@cateye.co.jp)