

Before using the product, please thoroughly read this manual and keep it for future reference.










AAA dry-cell battery x 2




- Before your trip, please make sure the light is firmly mounted to the bracket, it lights up, and the light is not blocked by baggage, etc.
- Stop your bicycle to operate the switch.
- This unit is not totally waterproof.
 - Please wipe and dry it completely after using in rain. Otherwise, it may cause failure.
- If the light unit or parts become dirty with mud, etc., clean with a soft cloth which is moistened with mild soap.

Never apply paint thinner, benzine or alcohol; damage will result.

1 HOW TO INSTALL BATTERY

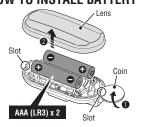




- 1. Using a coin to remove the lens from the light as shown in the drawing. (1) 2)
- 2. Insert the battery according to the mark stamped on the body, and then fit the lens firmly to the body. (3)

CAUTION!

- Be sure to install batteries in the correct direction.
- Install the rubber gasket correctly to maintain waterproof features.
- · Remove and store batteries when you will not use the light for a long period of time. Otherwise, batteries may leak liquid, which may result in failure.

2 HOW TO USE




Use the switch to turn the power ON or OFF and to change the lighting mode.

The light will turn on in the lighting mode previously selected. (Mode memory function)

Standard operating time	TL-LD135-R	TL-LD155-R
Rapid	Approx. 200 h	Approx. 120 h
Flash	Approx. 150 h	Approx. 90 h
Constant	Approx. 100 h	Approx. 60 h


3 HOW TO MOUNT TO A BICYCLE

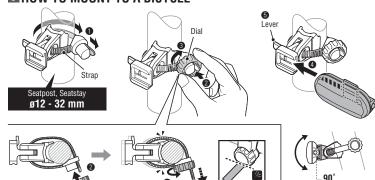

- 1. Mount the bracket to the seatpost or the seatstay as shown. (1 3)
- 2. Slide the light onto the bracket until it "clicks" into place. (4)
- To remove the light, press the lever (5) and slide it off.

- Be sure to tighten the dial by hand. When you tighten it too hard with a tool, the screw thread may be stripped.
- Check the bracket frequently to be sure it is properly tightened at all times.
- · Round off the cut edge of the bracket strap to prevent injury.

4 WHEN USING THE CLIP







- 1. Mount the clip to the belt as shown. (1)
- 2. Insert the light to the clip until it clicks. (2)
- To remove, press down the clip from the top while holding the light. (3)

Do not mount the clip to the saddlebag. It may come off by vibration of the bicycle.

LIMITED WARRANTY

2-year Warranty: Light unit only

CatEye products are warranted to be free of defects from materials and workmanship for a period of 2 years from original purchase. If the product fails to work during normal use, CatEye will repair or replace the defect at no charge. Service must be performed by CatEye or an authorized retailer. To return the product, pack it carefully and enclose the warranty certificate (proof of purchase) with instruction for repair. Please write or type your name and address clearly on the warranty certificate. Insurance, handling and transportation charges to CatEye shall be borne by person desiring service. For UK and REPUBLIC OF IRELAND consumers, please return to the place of purchase. This does not affect your statutory rights.

Please register your CatEye product on the website. http://www.cateve.com/en/support/regist/

CAT EYE CO., LTD.

2-8-25, Kuwazu, Higashi Sumiyoshi-ku, Osaka

546-0041 Japan

Attn: CATEYE Customer Service Section Phone: (06)6719-6863 : (06)6719-6033 E-mail: support@cateye.co.jp URL: http://www.cateye.com

[For US Customers] CATEYE AMERICA, INC.

2825 Wilderness Place Suite 1200, Boulder

C080301-5494 USA 303 443 4595 Phone Toll Free: 800.5CATEYE 303.473.0006 Fax E-mail : service@cateve.com

SPECIFICATIONS

Battery	AAA dry-cell battery x 2
Operating time	(When using alkaline batteries)
TL-LD135-R	Rapid: Approx. 200 hours, Flash: Approx. 150 hours, Constant: Approx. 100 hours
TL-LD155-R	Rapid: Approx. 120 hours, Flash: Approx. 90 hours, Constant: Approx. 60 hours
Temperature ra	nge 14°F – 104°F (-10°C – 40°C)
Dimensions/we	ight
TI I D10E D	1 07/C4" v 0 C1/C4" v EF/C4" / 0C v 7F v 01 0 mm) / 1 47 or /41 C g) / Including betterion

1-27/64" x 2-61/64" x 55/64" ($36 \times 75 \times 21.9 \text{ mm}$) / 1.47 oz (41.6 g) (Including batteries) 1-27/64" x 2-61/64" x 55/64" (36 x 75 x 21.9 mm) / 1.47 oz (41.8 g) (Including batteries) TI -I D155-R

The specifications and design are subject to change without notice.

SPARE PARTS

5342280 FlexTight™ bracket



5440900N



FlexTight[™] bracket (SP-12-R)



Rear rack bracket

5445620

5446510 RM-1 bracket



