

Before using the product, be sure to read this manual thoroughly and keep it available for future reference. If a child uses it, the child's guardian must read the manual and explain the precautions for use to the child. This product is developed assuming use by bicycle. Do not use the product in any way other than as described in this manual.

Design Patented Copyright© 2025 CATEYE Co., Ltd. LD635R-250206 **8**



↑ WARNING!!!

- Check periodically to ensure that the light unit is attached securely. Do not use a damaged rubber hand
- Always attention to the remaining battery power by checking the indicator periodically while using.

⚠ CAUTION!

- · Stop your bicycle to operate the switch.
- · Do not place it within children's reach.
- This unit is not totally waterproof. Please wipe and dry it completely after using in rain.
 Otherwise, it may cause failure.
- If the light unit or parts become dirty with mud, etc., clean with a soft cloth which is moistened with mild soap. Never apply paint thinner, benzine or alcohol; damage will result.

△LITHIUM-ION BATTERIES

Cautions on recharging

- We recommend using 500+mAh (USB2.0) USB battery charger.
- Avoid charging in direct sunlight or in a vehicle parked under direct sunlight, and make sure to charge only when the ambient temperature is between 41°F and 104°F (5 and 40°C).
- Before charging, be sure that no dust or other foreign objects attach to the USB plug.
- Do not subject the light to vibrations while charging.
- When your PC is in sleep state, the unit cannot be charged.
- Once charging is complete, be sure to disconnect the USB plug.
- Charging time is approximate values, and will vary depending on the environmental and usage conditions.

Cautions in use

- Charging, discharging, and storing in high temperatures will cause the rechargeable battery to deteriorate faster. Do not place the light inside a vehicle or near a heater.
- If the illumination time is significantly reduced even after proper charging, the rechargeable battery may be nearing the end of its service life. Dispose of the battery as described in "Cautions for dispose".

Cautions on storage

Cool and dry storage is recommended. For long period storage, it is important to charge the battery 30 minutes every 6 months.

Cautions for dispose

When disposing the light unit, please do so in accordance with your local regulations.



Light unit



Bracket








Bracket rubber pad F


Rubber band USB cable

1 HOW TO CHARGE


Always charge the product before use.

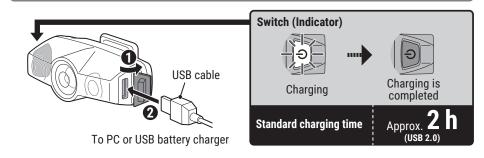

2 HOW TO MOUNT

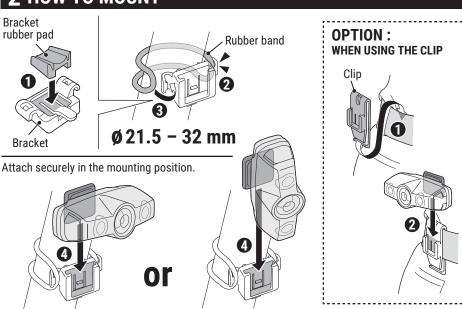

3 SWITCH OPERATION

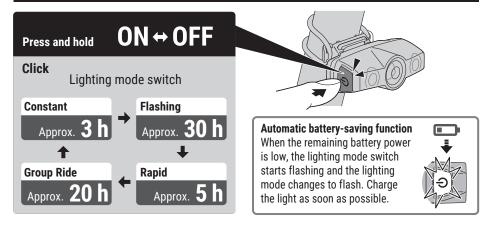

SPARE / OPTIONAL PARTS

5342450

5342730

5342460







USB cable



Clip

SPECIFICATIONS

Battery : Li-ion 3.7 V 320 mAh Temperature range : $14^{\circ}F - 104^{\circ}F$ (- $10^{\circ}C - 40^{\circ}C$)

Recharge/discharge number of times: About 300 times

(until the rated capacity drops to 70%)

Dimensions/weight: 25/32" x 2-1/16" x 1-17/64"

(20 x 52.5 x 32 mm) / 0.76 oz (21.5 g)

* The specifications and design are subject to change without notice.

LIMITED WARRANTY

2-year Warranty: Light unit only (excludes battery deterioration)

CatEye products are warranted to be free of defects from materials and workmanship for a period of 2 years from original purchase. If the product fails to work during normal use, CatEye will repair or replace the defect at no charge. Service must be performed by CatEye or an authorized retailer. To return the product, pack it carefully and enclose the warranty certificate (proof of purchase) with instruction for repair. Please write or type your name and address clearly on the warranty certificate. Insurance, handling and transportation charges to CatEye shall be borne by person desiring service. For UK and REPUBLIC OF IRELAND consumers, please return to the place of purchase. This does not affect your statutory rights.

CAT EYE CO., LTD.

2-8-25, KUWAZU, HIGASHI SUMIYOSHI-KU, OSAKA, JAPAN 546-0041 For inquiries, please visit https://cateye.com/intl/contact

[For US Customers]

CATEYE AMERICA, INC.
Please visit https://www.cateyeamerica.com

Toll Free: 800.5.CATEYE